


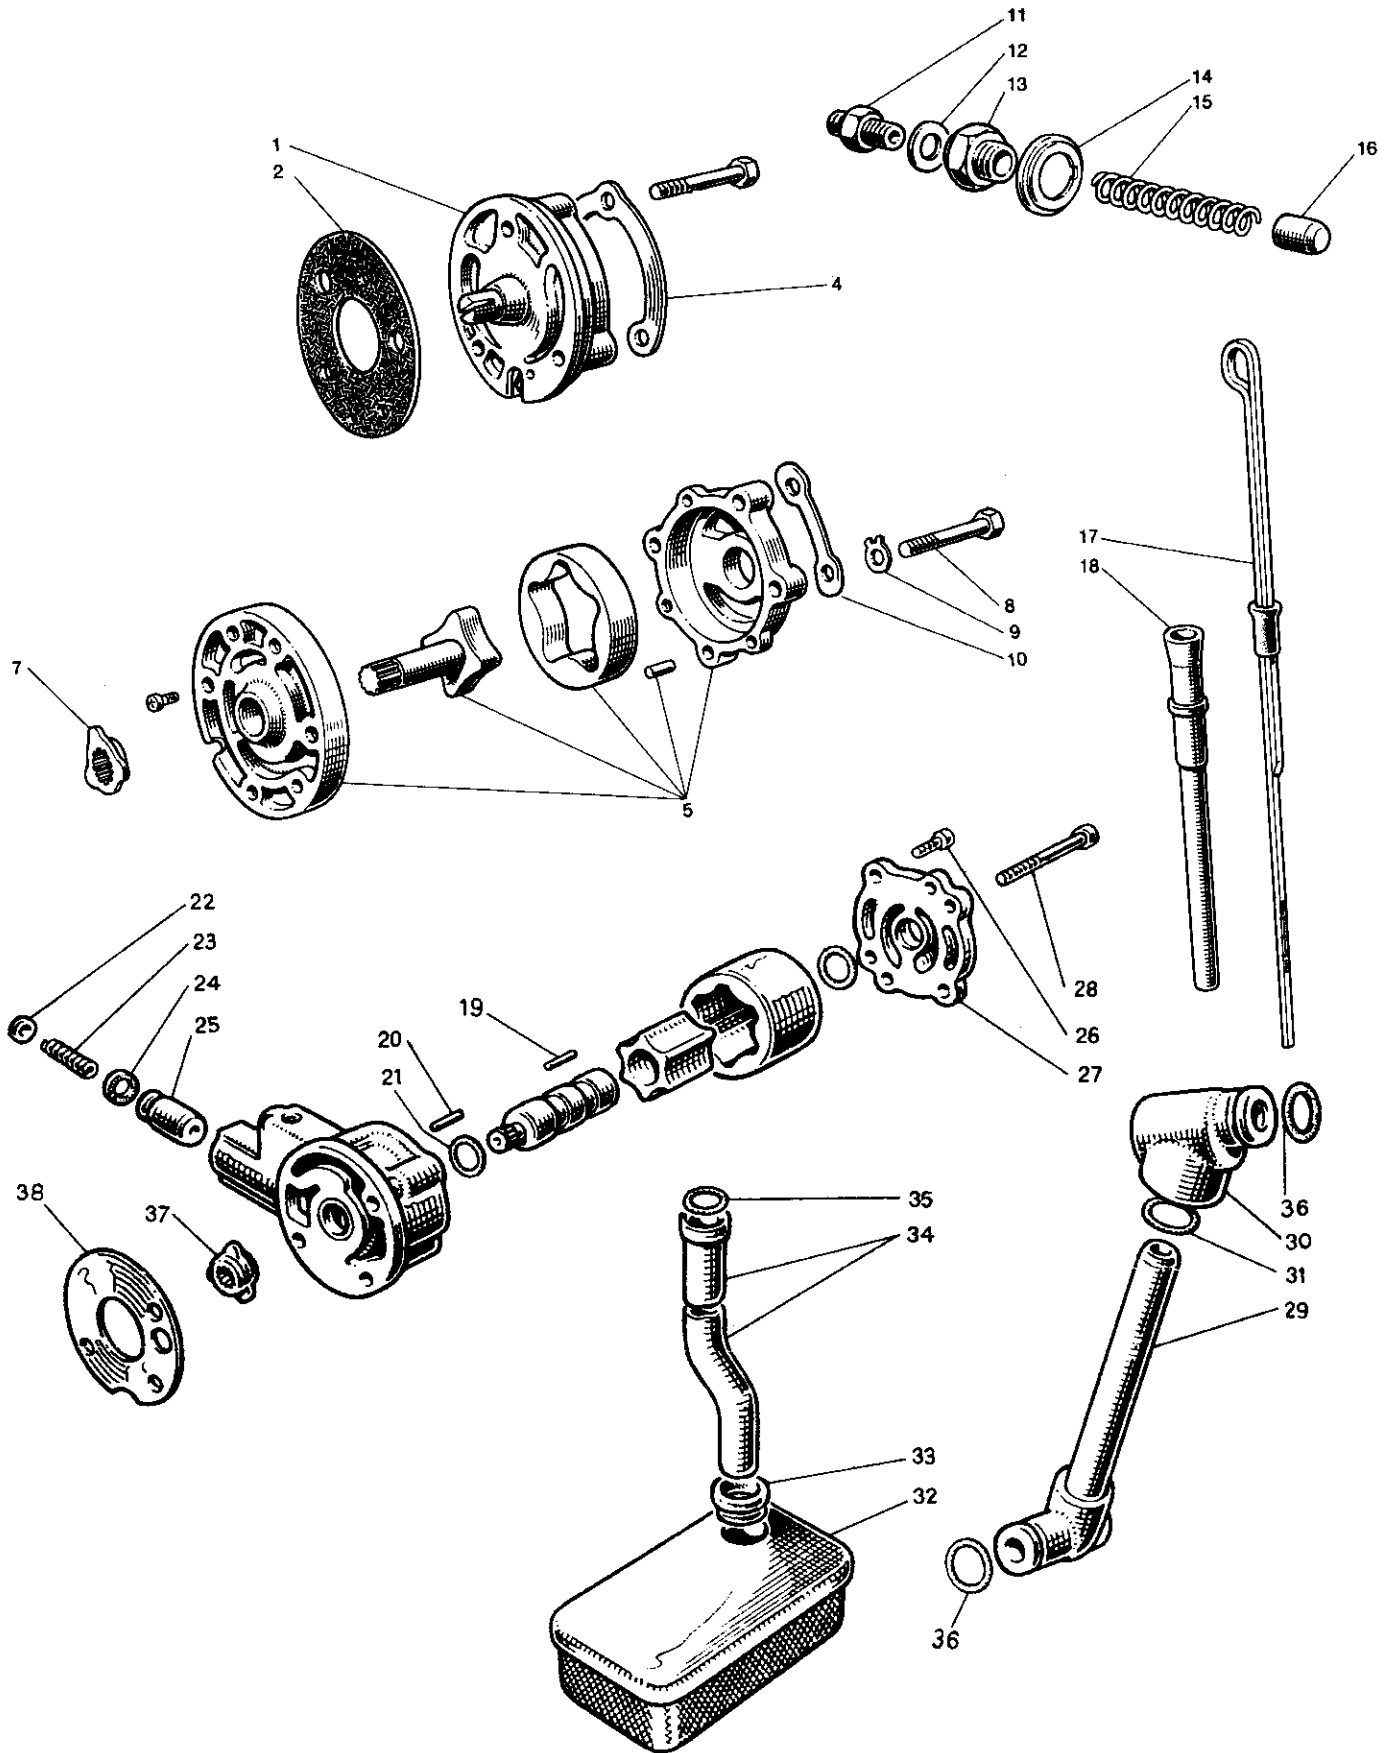

III No.	Part No.	DESCRIPTION	Qty.	Change Point	REMARKS
OIL PUMP—1000, 1001 & 1300					
1	12G 793	Pump—oil	1		1000 & 1001
5	12G 2790	Pump—oil	1		1300
2	12G 730	Gasket—pump to crankcase	1		
4	12G 926	Washer—locking	1		
7	12G 729	Flange—oil pump driving	1		1300
8	HBN 0414	Screw	3		1000 & 1001
8	HBN 0413	Screw	4		] 1300
9	LWN 204	Washer	2		
10	12G 2097	Washer—lock	1		
10	12G 2098	Washer—lock	1		
11	2A 269	Union—oil pressure pipe	1		
12	2K 4956	Gasket	1		
13	12A 1851	Nut	1		
14	6K 431	Washer (copper)	1		
15	6K 853	Spring—valve (50 lb pressure)	1		
16	12H 865	Valve—oil release	1		
17	12A 1263	Rod—oil dipper	1		
18	12A 1261	Tube—rod (Nylon)	1		

OIL PUMP—MINIMATIC

	12G 796	PUMP—OIL	1		
	NSP	Shaft—pump	1		
19	27H 6908	Pin—drive	1		
20	27H 6911	Dowel	2		
21	17H 6337	Circlip	2		
22	27H 6913	Cap—valve	1		
23	27H 6914	Spring—valve	1		
24	27H 6915	Ring—piston	1		
25	27H 6912	Valve—oil flow control	1		
26	17H 2574	Screw (with lock washer)	1		
27	27H 6910	Cover	1		
28	12A 1254	Screw—Allen	3		
38	12G 730	Gasket—pump to crankcase	1		
37	12G 729	Flange—oil pump driving	1		
29	22A 1185	Pipe—oil outlet	1		
30	22A 1187	Block—outlet pipe	1		
31	22A 1560	'O' ring—block	1		
32	22A 1570	STRAINER—OIL	1		
33	22A 1565	Grommet	1		
34	22A 1171	Pipe—oil suction	1		
35	22A 1559	'O' ring—suction pipe	1		
36	22A 1562	'O' ring—pump to pipe	2		